

## Punch cum Splitter Assembly Instructions




- Remove the Top Frame by removing the Wire Tie and Ropes

Handle Screws



- Remove the two Handle Screws and loosen the other two fixed screws
- Fit the Blade handle in line with the Blade and the punching Handle in line with the Lever

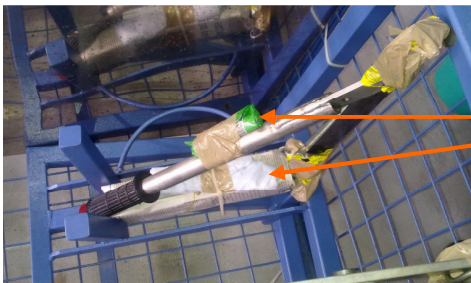

- Taken out the Tender Coconut Opener, Tools and Top Frame Bolts in the packets



- Fix the Top Frame Assembly with four Bolt and Nuts. Insert the Tray for complete Installation.
- The Floor unevenness can be adjusted by four Bolts in the Bottom of the machine.